

Model: WS Concrete Box 204x135

Family: WALL-SMART

DWG NO. 10-04-115-SPC

PRODUCT SPEC.

REVISION A

DATE 29/Apr./2014



Make Your Wall Smart


Wall-Smart concrete/block installation box:

Wall should be plastered up to the front frame segments (item #1).

Model No.: 10-01-115

- Front frame segments (item #1) should be removed after the wall was plastered (to be replaced with the adapter).
- For low voltage use only.
- Before installation, read Wall-smart installation instruction No. 10-01-00103-INS

Key properties:

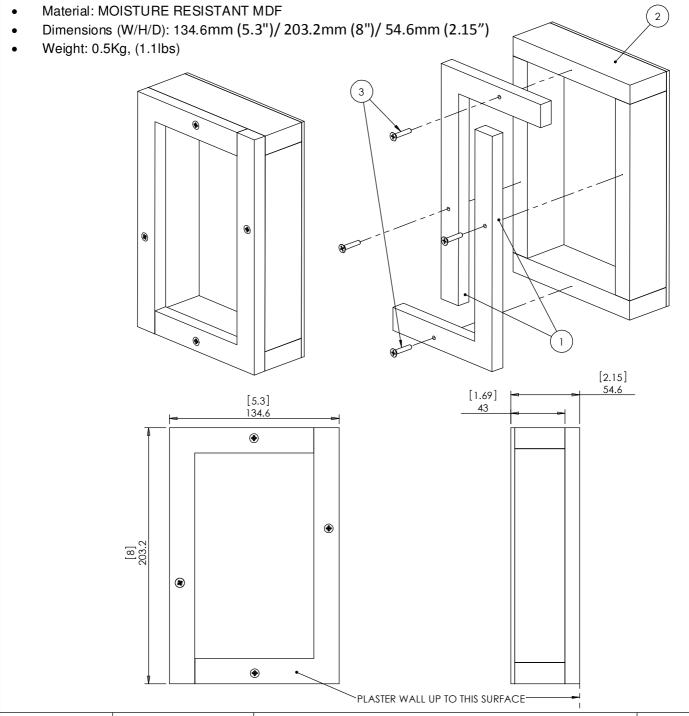

Phone: (201) 205-2056 / info@wall-smart.com